

# USING THE AUTO HORN/TIMER 3/24/2022

## SOUND HORN SELECT

### POWER ON/OFF



## SEQUENCE






### START SEQUENCE

Power to operate the Horn/Timer comes from the committee boat stern battery. Turn on the switch in the battery compartment. Plug the timer into one of the wire receptacles plugs on the committee boat cabinet top.

**BEWARE THE COMMITTEE BOAT ROCKS, Tie Down the timer or it will fall off.**

**To Start a Race:** With power switch OFF, lower the start sequence switch to “STOP SEQUENCE”. Turn power switch to ON. We use the 5-minute sequence. To start a racing sequence, raise the start sequence switch. The horn will blast the Warning Sound and other required timed horns. **Use the Air Horns for the Pre-Race courtesy signal and for all sounds other than the start sequence.** Examples: Postponement and Shorten Course requires 2 horn blasts each. Note: The Red Button also gives a single horn blast every time it is pushed, use it when the air horns are unavailable.

For sales / service of the unit visit us at [RCFlag.com](http://RCFlag.com) or call 813-758-1307

TIME	SIGNAL SOUND	FLAG	
<b>PRE-RACE:</b> LEAVE TIME TO STUDY THE WIND, FIND THE AVERAGE AND SET A GOOD COURSE	PRIOR TO ANY SIGNAL THE COURSE SHOULD BE SET AND POSTED	ORANGE STARTING LINE FLAG Remains in place during the start	
<b>COURTESY WARNING SOUND</b> Several short horn blasts	USE AIR HORN Not part of timed sequence	NO SIGNAL FLAG	
<b>CLASS “A” FLAG – WARNING</b> 5 MIN	Raise switch to start the sequence	RAISE CLASS FLAG	
<b>PREPARATORY FLAG</b> 4 MIN	Sound Blast	RAISE PREPARATORY FLAG	
<b>REMOVE PREPARATORY FLAG</b> 1 MIN	Sound Blast	DROP PREPARATORY FLAG	
<b>START</b> 0 RECORD THIS TIME	Sound Blast	DROP CLASS FLAG	
FINISH LINE RECORD EACH BOATS TIME	1 BLAST FOR FIRST PLACE BOAT	Blue Finish Line Flag Is Flying (No Orange Flag)	